

Silhouette Settings* for heat transfer films & paper

Product Name	Blade Setting	Speed	Thickness
FlexCut Sticky	2	8	4
FlexCut Sticky Nylon	1	8	6
FlexCut Sweet	2	6	7
Poli-Flex Fashion Glossy	1	8	7
Poli-Flex Fashion Printed	1	8	6
Velcut Evo	3	5	33
Fashion VelCut	2	3	15
Metalflex	1	7	4
ReflexCut	1	8	7
Glitter	3	5	30
Sticky Flock	8	7	10
Jet-Pro® SofStretch™	1	3	1
Jet-Pro® Active Wear**	1	3	15
yolo Inkjet	1	3	1
3G Jet-Opaque®	1	3	3
Jet-Opaque® II	1	3	2
yolo Inkjet Opaque	1	3	2
Phosphor Glow	2	3	4
Phototex	2	5	10
FiberPrint	3	3	25
Techni-Print® 4.0**	2	3	10
Techni-Print® EZP	1	3	2
Laser 1 Opaque®	1	3	1


*Adjust as necessary and always use a cutting mat (carrier sheet)

**Cut through both the film layer and release liner

Your cutter includes a precision cutting blade. Special care should be taken when setting up this blade. The blade is a consumable item which is warranted against manufacturing defects but not damage, misuse or wear and tear.

Prior to cutting, open the 'Silhouette Cut Settings' menu within the Silhouette Studio® software. Select a Silhouette product to use preset settings or enter your own **speed**, **thickness** and **blade depth**. Then manually adjust the blade depth to the number indicated.

Always use the lowest blade setting possible.

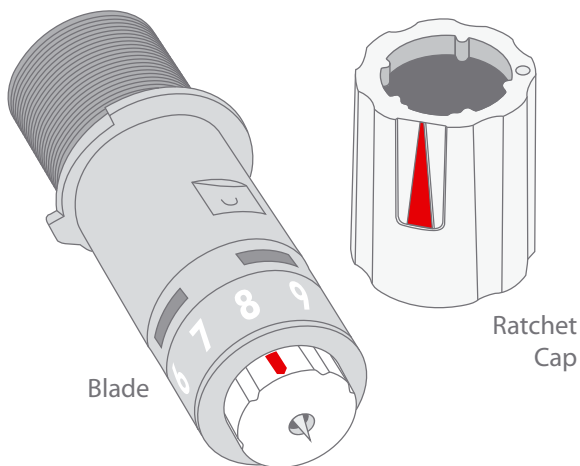

Adjust the depth of your blade by placing it in the ratchet cap or adjustment socket of your cutter. Turn the blade until the arrow on the cap (or socket) lines up with the required number on the blade.