




Silhouette printable heat transfer material

for light fabrics

1

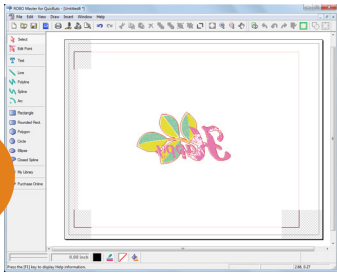

Open your desired image in the Silhouette software and MIRROR IT SO YOU SEE THE REVERSE. Verify that registration marks are visible on your page.

2



Feed your heat transfer sheet into your inkjet printer so that it will print on the blank side (not the grid side) and print from the Silhouette software.

3



Load your printed sheet into the Silhouette. In the control panel, make sure you check the box "Search Registration Mark." The Silhouette optic scanner will read the marks and cut around the edge of the image.* Use the blue cap and a cutting thickness of 1-5 and a speed of 3-5.

4



Peel the excess transfer material away leaving only your design on the film backing.

5



Place the sheet face down with the film backing on top and cover the film with fabric

6



With an iron (on cotton settings) or heat press (345 F), PRESS DOWN on the image for 30-40 seconds.

7



Allow the project to cool before peeling off the backing.

8



Your custom clothing design is ready to wear!

Be sure to PREWASH YOUR FABRICS.

For longer lasting results, wash and dry clothes inside out.

Use extreme caution when operating a hot iron. Keep out of reach of children.

NOTE: Silhouette heat transfer material will not adhere to nylon.

For more tutorials and troubleshooting tips on print & cuts, heat transfer material and more, visit silhouetteusa.com.