


1

Mirror your image or artwork



2

Cut your image using a contour/plotter cutter, ensuring the blade cuts through the film only and not the release liner

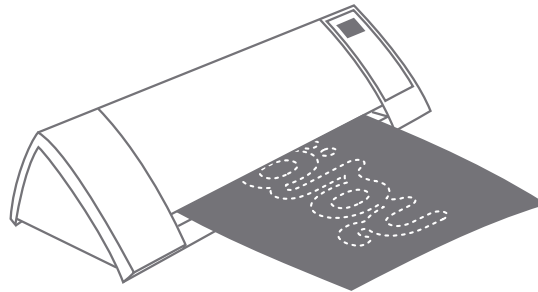

**CRICUT GUIDELINES\***

SETTING Standard Iron On  
BLADE Standard Fine Cut  
PRESSURE Default


**SILHOUETTE BLADE SETTING\***

SPEED 8 FORCE 7

\*Adjust as necessary. Use a cutting mat (carrier sheet) and cut through the film layer only. Test cuts are recommended.


3

Weed away the unwanted film, leaving the image on the release liner (a weeding tool may help)

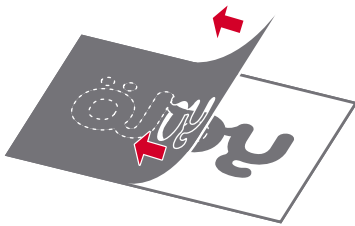


4

Prepare the heat press at 150°C / 300°F

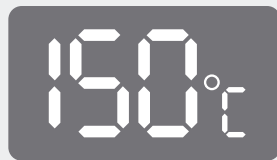


5

Place image face down on substrate

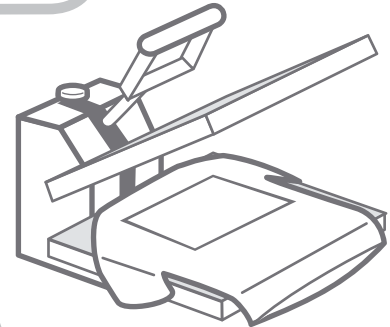


6

Cover with a Teflon or silicone sheet

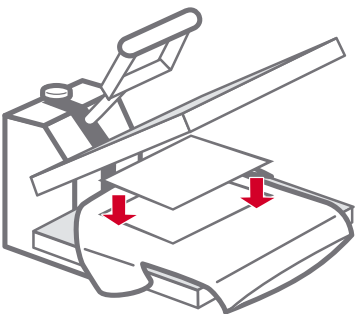

7

Apply **medium to heavy** pressure for **15 seconds**

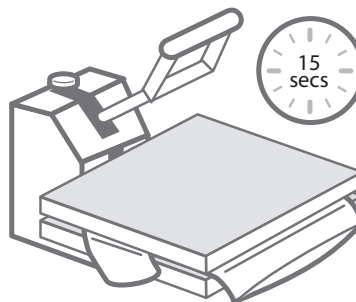

8



Peel when warm\*

24hrs before washing

\*After approximately 10 seconds

**wash and care instructions**



Machine wash separately



Dry at low heat setting



Do not bleach or directly iron image

**contact**

hello@yolo.co.uk

+44 (0) 2082 400 658

www.yolo.co.uk

Product code: REFC

Store in a cool, dry place and seal the packaging between uses