


1

Select normal print quality and a plain or photo paper setting. Print on the blank side of the transfer paper, one sheet at a time (there is no need to mirror your image or artwork)



Print on the blank/unprinted side of the transfer paper

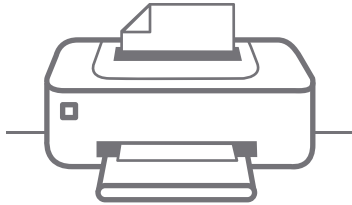

2

Trim around or contour cut the image  
Note: This paper has a white film background



SILHOUETTE  
BLADE SETTING\*

SPEED 3 THICKNESS 2-3

\*Adjust as necessary. Use a cutting mat (carrier sheet) and cut through the film layer only


3

Peel off backing paper



4

Pre-heat iron for 3 minutes on the highest cotton setting

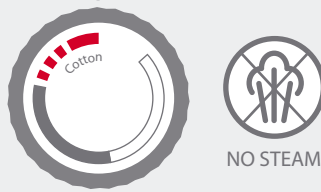


5

Choose a smooth hard surface at waist level




6

Place image face up on substrate and cover with a Teflon or silicone sheet

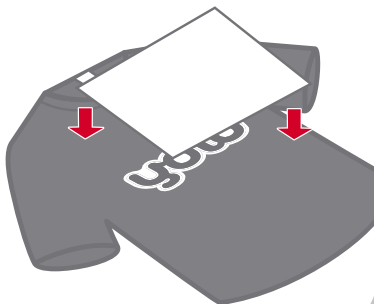

7

Using two hands firmly slide the iron vertically up and down

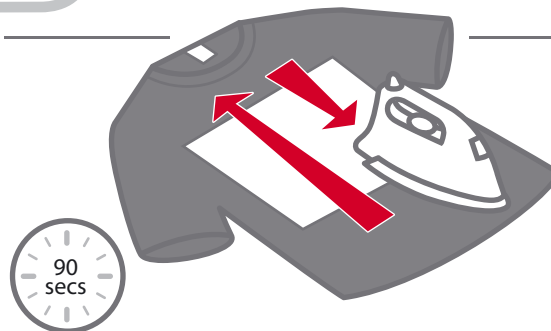


The iron should be halfway off the edge of the transfer when the edges are ironed

In 90 seconds the iron should make two passes over the surface of the transfer

8

Using two hands firmly slide the iron horizontally side to side

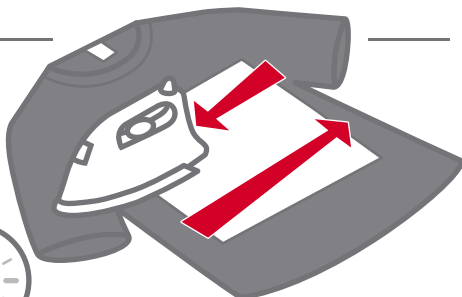

The iron should be halfway off the edge of the transfer when the edges are ironed

In 90 seconds the iron should make two passes over the surface of the transfer

9



Peel when cold


24hrs before washing

1

Select normal print quality and a plain or photo paper setting. Print on the blank side of the transfer paper, one sheet at a time (there is no need to mirror your image or artwork)



Print on the blank side of the transfer paper (side without grid)

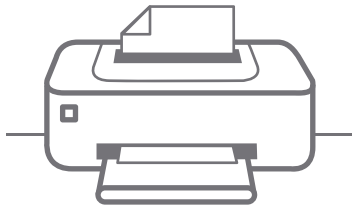

2

Trim around or contour cut the image  
Note: This paper has a white film background



SILHOUETTE  
BLADE SETTING\*

SPEED 3 THICKNESS 2-3

\*Adjust as necessary. Use a cutting mat (carrier sheet) and cut through the film layer only


3

Peel off backing paper




4

Prepare the heat press at 175°C / 350°F

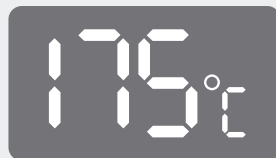


5

Place image face up on substrate and cover with a Teflon or silicone sheet

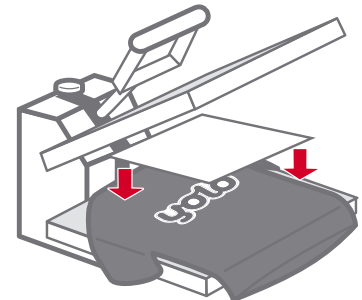

6

Apply **medium** pressure for 20 - 30 seconds

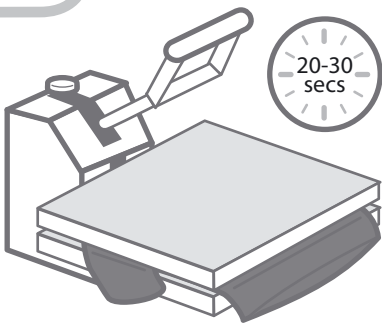

7



Peel when cold

24hrs before washing

**yolo tip**

Repressing for 5-7 seconds with a Teflon or silicone sheet (remove when cold) to improve adhesion and increase softness and durability

**wash and care instructions**



Machine wash separately



Dry at low heat setting



Do not dry clean, bleach or directly iron transfer

**contact**

hello@yolo.co.uk

+44 (0) 2082 400 658

www.yolo.co.uk

Product code: JOII

Store in a cool, dry place and seal the packaging between uses

Printed on 100% recycled paper